



8907050191

Description

[Product Information](#)

Lexus 89070-50191 Transmitter Key with 3 buttons - lock / unlock / boot

This product supersedes part No 89070-50230, 89070-50190

This key will need to be programmed to your vehicle

Replacement case available - part No TOY483BL

[Key Series](#)

Toy48 - 40000 - 49999

[Vehicles](#)

Lexus GS300, Lexus GS430, Lexus LS400